

SIGNATURE ENTRYWAY: SYSTEM MAINTENANCE

Regular vacuuming (Weekly in low-traffic areas, and daily or twice daily in areas with higher traffic) with a motor-driven brush and beater bar can remove up to 80% of surface dirt, and is the easiest way to prolong the life of your carpet.

MAINTENANCE DAILY:

Vacuum (with beater bush) every day to remove excess dirt and grime. Spot clean stains and deposits as necessary using only approved methods (contact your representative or customer service for details). Inspect and document for signs of small damage, as these may grow over time.

WEEKLY:

Clean floor under mat; inspect mat for misplacement, buckling, riding up walls/fixtures, and other issues, documenting as necessary.

MONTHLY:

Professionally clean matting using warm water extraction to avoid shrinking (contact representative or customer service for details). We recommend cleaning at a rate of 1 ft. per second in a north-south direction followed in an east-west direction.

Regular vacuuming is key to maintaining your carpet, but eventually, the carpet color dulls from dirt and grime stuck in the fibers. The dirt is then carried further into the building to form more soil reservoirs. Additionally, the oil content (15%) of the soil causes particles to stick to carpet fiber and resist vacuuming. To restore the carpet to its best condition, frequent light cleaning gives the best result and is often very cost effective.

For any questions about Trellis Entryway System maintenance, please contact our Technical Services Department at 800.809.7086 or visit our website at signatureflooring.com/resources.