
## WATERPROOF MULTI TRIM


## TRANSITION INSTALLATION


Install the flooring leaving a 1 1/8" gap between the two floors for the installation.


Measure and trim to fit.


width: 1.6" height: 0.23" length: 94"

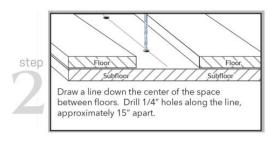



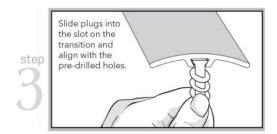

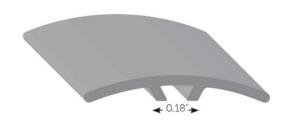

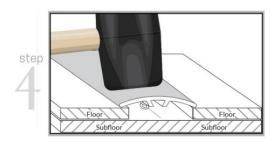

## **DESCRIPTION:**

The multi-trim can be used for both floors of equal and unequal height. It automatically adjusts to varying heights allowing it to also be sued as a surface reducer

Automatically adjusts to varying heights.